User Manual For Digital Signage (Setting on the Digital Signage)

When you receive the machine, power it on, please check if the controlling server address.

Usually we will pre-set it to the one <u>www.szhuanbo.com:4000.</u>

Please follow below steps:

Connect a keyboard to the machine, press the "Menu" key on the keyboard , you will jump to below picture; Go and click the "Setttings"



Jump to below picture. The first line shows the controlling server address. If it's <u>www.szhuanbo.com:4000</u>, then keep it, do not need to anything. If it's others, please change it to <u>www.szhuanbo.com:4000</u>.

Settings			
	Control Server Set server's address	mgv-svr-00-1f-f2-0b-12-f0	>
	NTP Server Set NTP server's address	ntp.viamgv.com	>
6	Time Zone Set locale time zone	China Standard Time	>
A	Language Select display language	English	>
G	Display Rotation Set display rotation		>

After change, Click OK and return to the below Interface.

Now, Click "Network" and get the Digital Signage connect to WiFi.





After connect to WiFi, please click "ECS" to return to the interface with QR code

Next, use your smart phone or other smart device, scan the QR and install the APP.

To start to manage the Digital Signage via the APP.

For APP operating, please refer to "BroadVisual Mobile User Manual"

(https://www.360digitalsignage.com/wp-content/uploads/2022/07/BroadVisual_%E8%8B%B1%E 6%96%87_%E6%89%8B%E6%9C%BA%E6%8E%A7%E5%88%B6%E4%BB%8B%E7%BB%8D.pdf)